

Addressable extinguishing pause call point

ADDRESSABLE



Addressable resettable call point, for extinguishing pause. Manual operation, Type A (direct).

Module operating statuses can be used as operands in formulas. RSC® management: programming, remote management and control. Loop connection. Dual short-circuit isolator. Installation method: with piping in visible execution with pipe box, with piping in sub-track execution, on flush box 502, or, on flush box 503 with optional base TFCP-FRAME.

Supplied accessories: tube box, opening key and reset button. Indoor use. Protection rating IP44. Polycarbonate casing V0.

Green colour. Dimensions (L x H x D) 93 x 88 x 41mm. With the tube box the dimension D becomes 76mm.

Compliant to EN 54-11:2001+A1:2005 - EN 54-17:2005.

MODEL								
Name	Item no.							
TFCP-AB	TF5TFCPAB							

OBLIGATIONS AND NOTICES

The TFCP button can only be used when connected to a compatible Tecnofire control unit detection loop. In the planning and installation phases, the regulations in force must be observed and applied.

ADDRESSING

The physical address which identifies the button is set using two decimal rotary switches located inside the enclosure, under the actuation surface.

The two switches enable to set the two digits which make up the physical address number of the device.

The switches are marked by writings which define the position of the digit to set: X10 for tens and X1 for units.

The numeric range of the allowed addresses for the button modules is 01 to 99.

Note: setting the address 00 excludes the button from operation, yet it draws power from the loop.

	Alarm call point 1 logic unit Physical address = XX		X Units
			X Tens
			X10

SHORT-CIRCUIT ISOLATOR

The button is equipped with a line separator with double insulator. In the event of a short circuit of the Loop line, the separator intervenes by isolating the section of line affected by the fault, thus safeguarding the correct functioning of the devices connected upstream and downstream.

The intervention of the line separator preserves the smooth operation of the loop and generates the failure signal "Separator open".



TFCP-AB

Addressable extinguishing pause call point


ADDRESSABLE

EQUIPMENT AND ACCESSORIES

The call point is supplied with a standard base and a pipe box. The equipment allows the call point to be installed with exposed piping via the pipe box, or in residential environments with piping in sub-track execution, the call point can be installed on a 502 flush-mounting box.


To protect the button from vandalism and accidental impacts, the optional transparent TFCP-COP anti-vandal cover is available.

A clamp can be attached to the protective door to seal its opening.

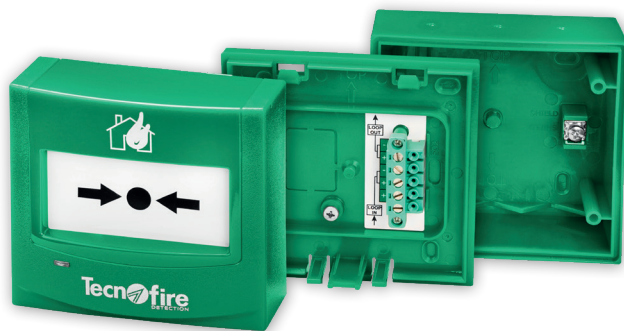


OPENING THE CASING

To open the button, it is necessary to use the opening and reset key supplied. Position the key at the interlocking seats, push upwards until the button releases, then turn and lift the button upwards until it separates from the base.

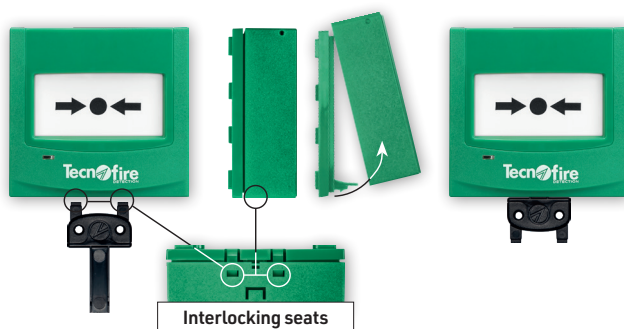

RESETTING THE CALL POINT

To reset the call point, inserted the reset key must be into the reset slide and pushed all the way in. During installation, it is possible to choose the reset mode of the pushbutton, if the key insertion locking tab has been cut, the user can reset the call point, if, on the other hand, the locking tab has not been cut, insertion of the reset key is blocked, in this case the reset can only be carried out by qualified technical personnel authorised to open the call point to carry out the reset.

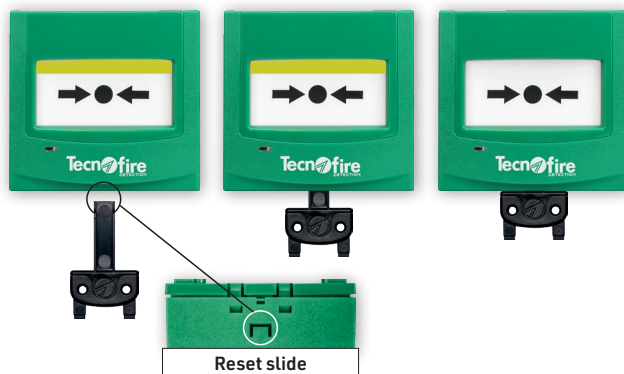

DIAGNOSTIC FUNCTIONS

Tecnofire control units manage a series of specialised diagnostic functions for each type of device. The diagnostic functions available for the addressed button allow you to:

- Physically identify the module.
- Identify the device type.
- Identify the HW and FW version.
- Detect electrical operating data.
- Read statistics from the communication monitor.

31/01/2024	Access level 3	08:00:00
Menu Test module 3 Loop 1		
Identification	TECNO - call point	
Self declaration	0.1	
HW release	3.1	
FW release		
Level reading		
Statistic		


DIAGNOSTIC FUNCTIONS OF THE MODULE TECNO-call point	
Identification	Turns on the Led of the device for its identification
Self declaration	Self declaration of the module type
HW release	Self declaration of the hardware version
FW release	Self declaration of the firmware version
Level reading	Measurement of the electric values of operation
Statistic	Statistic/functional values related to communication

Consumption	Strings sent
Power supply level	Errors
Zero level	Percentage of success
Consumption level	Percentage of errors
Loop resistance	Latency

31/01/2024	Access level 3	08:00:00
Level analysis Loop 3 Module 1		
Consumption	51 mA	
Power supply level	26.44 V	
Zero level	0.51 V	
Consumption level	5.49 V	
Loop resistance	<1.00 Ohm	
active		



INSTALLATION

In installations with flush-mounting pipes, fix the base with the terminal box directly to the wall and mount the push button on it. In installations with surface-mounting pipes, fix the pipe box to the wall and mount the base with the terminal board and pushbutton on it.

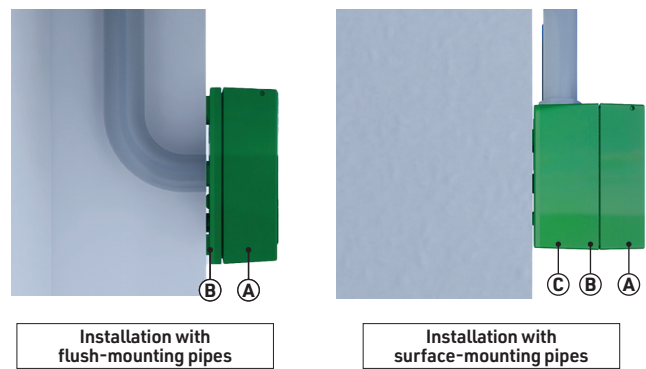

CONNECTION TO THE LOOP

The modular structure of the push button facilitates wiring operations; the connection terminal block, fixed on the base, engages with a guided joint on the push button body.

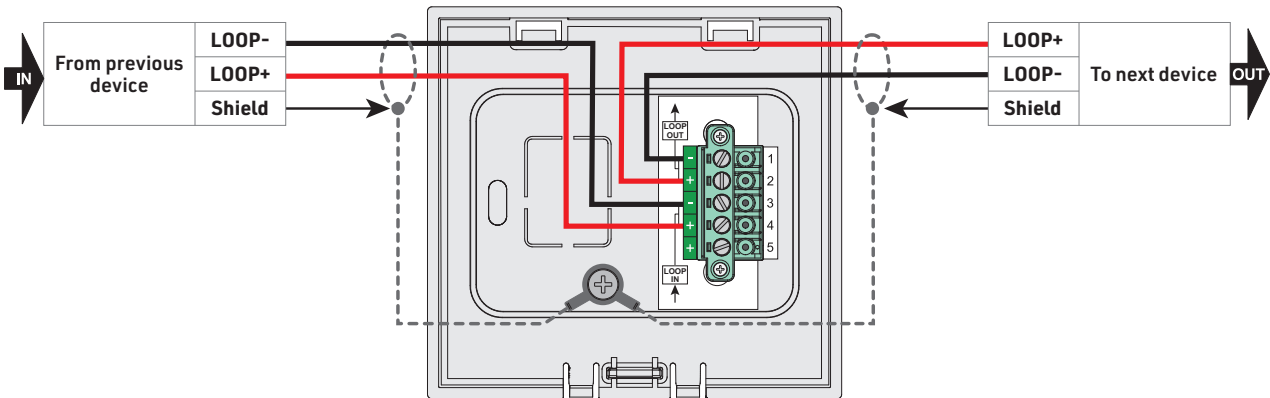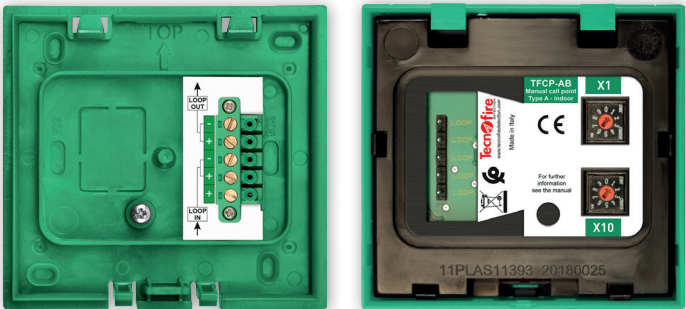

TERMINALS				
	1	LOOP-	Negative power Loop output	
	2	LOOP+	Positive power Loop output	
	3	LOOP-	Negative power Loop input	
	4	LOOP+	Positive power Loop input	
	5	LOOP+	Positive power Loop input (no isolator)	

TFCP-AB

Addressable extinguishing pause call point

Accessories

	TFCP-COP Transparent anti-vandal cover with anti-opening clamp, for TFCP-C and TFCP IP55 series call points. Pack: 10 pieces. Item no. TF5TFCOPCP		TFCP-KEY Opening and reset key for TFCP-C and TFCP IP55 series call points. Pack: 10 pieces. Item no. TF5TFKEYCP
---	--	---	---

Technical and functional specifications

General information	Addressable extinguishing pause call point	TFCP-AB	Programmable functions	Functioning criterions	5 modes
	Function	Manual call point		Evacuation signalling	Associable
	Actuation	Type A direct	Physical specifications	Operating temperature	-15°C...+70°C
Loop interface	Addressable module	Connection over loop		Relative humidity (non-condensing)	10%...93%
	Addressing	2 rotary switch		Protection class	IP44 (EN 60529)
	Communication protocol	FIRE-SPEED		Casing	PC
	Loop isolator	Double insulator		Dimension without tube box (L x H x D)	93 x 88 x 41mm
	Polling frequency	Programmable		Dimension with tube box (L x H x D)	93 x 88 x 76mm
	Polling signaling Led	Excludable		Color	Green
Electrical specifications	Nominal voltage	24V DC	Compliant	Standards	EN 54-11:2001+A1:2005 EN 54-17:2005
	Operating voltage	18V...30V DC		System compatibility	UNI EN 54-13:2020
	Consumption	500µA @ 24V DC			
	Consumption in alarm	1,6mA @ 24V DC			

N.B. Declaration of conformity are available on www.tecnofire.com



by **Tecnofire S.r.l.** - Via Ciriè 38 - 10099 - San Mauro T.se - Torino (Italy)
 Manufacturing plant: Strada del Cascinotto 139/54 - 10156 - Torino (Italy) - www.tecnofire.com

The product features can be subject to change without notice.

MADE IN ITALY

TFCP-AB - DATA SHEET - REL. 1.0

N.B. Declarations of conformity and performance are available on www.tecnofire.com